
3-4. Using the rear seat entertainment system

Rear seat entertainment system features* (without navigation system)

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.


Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

► 5-seat models

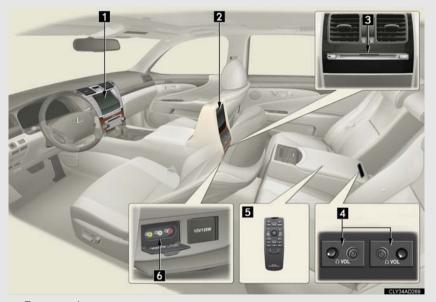

- Front audio system
- 2 Display
- B DVD player
- 4 Headphone volume control dials and headphone jacks
- 5 Rear seat entertainment system controller
- 6 A/V input port

▶ 4-seat models

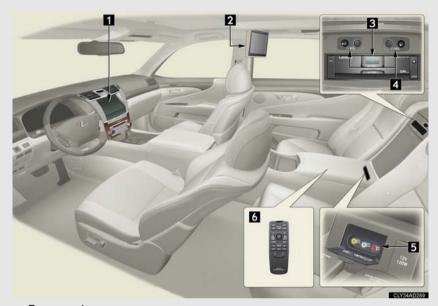

- Front audio system
- 2 Display
- B DVD player
- 4 Headphone volume control dials and headphone jacks
- **5** A/V input port
- 6 Rear seat entertainment system controller

Rear seat entertainment system controller



To use the buttons under the cover, slide the cover down.

Turning on or off the display (5-seat models)



1 On

1 Off

Press "OFF".

Turning on or off operations can be performed from the front seat. $(\rightarrow P. 325)$

Opening or closing the display (4-seat models)

n Opening or closing the display



1 Open

Press OPENICLOSE, "ON", "DVD", "VIDEO", "SOURCE" or II.


1 Close

Press OPEN/CLOSE or "OFF".

If the display is closed with an image shown, the image will automatically turn off. (When you press periods), the sound will not be turned off.)

Opening and closing operations can be performed from the front seat. $(\rightarrow P. 325)$

n Tilting the display

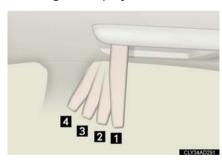

The display angles change as follows each time is pressed.



The display angle is memorized and will be recalled when the "ENGINE START STOP" switch is turned to ACCESSORY or IGNITION ON mode again.

n Caution screen



This screen appears for a few seconds when the rear display turns on.

During this time, only be operated. (4-seat models)

Headphone jacks

► 5-seat models



To listen to the rear audio, use headphone.

- 1 To use the headphone Connect it to the jack.
- To adjust the volume Turn it clockwise to increase the volume. Turn it counterclockwise to decrease the volume.

▶ 4-seat models



To listen to the rear audio, use headphone.

- 11 To use the headphone Connect it to the jack.
- To adjust the volume

 Turn it clockwise to increase the volume. Turn it counterclockwise to decrease the volume.

Changing the source



Press "SOURCE" to display the source screen.



Select an audio source using "ENT".

Changing the speaker output



To play the rear audio over the speakers in the vehicle, turn "Speaker Output" on.

n The rear seat entertainment system can be used when

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

n Jam protection function (4-seat models)

The display will stop closing and return to its previous position if something gets in the way of it closing.

n When 🚫 appears on the screen

It indicates that the selected icon cannot be used at this time.

n Rear system lock

→P.330

n Before using the controller (for new vehicle owners)



An insulating sheet is set to prevent the batteries from being depleted. Remove the insulating sheet before using the remote control.

${ m n}\,$ When the controller batteries are fully depleted



Remove the depleted batteries and install new batteries.

n Headphones

With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact your Lexus dealer for further details.

n Volume

- 1 Adjust the volume when you connect the headphone to the jack. Loud sounds may have a significant impact on the human body.
- 1 Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.



n When the rear seat entertainment system is not used

Keep the display closed.

In the event of an accident or sudden braking, an occupant may hit the opened display resulting in injury.

n To prevent accidents and electric shock

Do not disassemble or modify the remote control.

n When the remote controller is not used

Stow the remote controller.

Injuries may result in the event of an accident or sudden braking.

n Closing the display (4-seat models)

Never use any part of your body to intentionally activate the jam protection function.

⚠ NOTICE

n Cleaning the display

Wipe the display with a dry soft cloth.

If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

n To prevent damage to the remote control

- 1 Keep the remote control away from direct sunlight, high temperature and high humidity.
- 1 Do not drop or knock the remote control against hard objects.
- 1 Do not sit on or place heavy objects on the remote control.

n DVD player

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

n Closing the display (4-seat models)

Do not close the display using your hand. Doing so may result in a malfunction.

3-4. Using the rear seat entertainment system Using the radio



Selecting a preset station

Press " \wedge " or " \vee " on "CH DISC" until the desired station appears on the screen.

Tuning the station

Press or until the desired station appears on the screen.

Press and hold or , the stations will be searched automatically.

3-4. Using the rear seat entertainment system

Using the front DVD player



- Turning on DVD player mode
- Selecting a disc

Selecting a disc



Press " \wedge " or " \vee " on "CH DISC" until the desired slot number appears on the screen.

- 1 Audio CD, MP3/WMA discs →P. 492
- 1 DVD video/audio → P. 493
- 1 Video CD → P. 503

3-4. Using the rear seat entertainment system Using the rear DVD player



Press "DVD" or select "Rr-DVD" on the source screen.

Loading a disc

▶ 5-seat models



Insert the disc into the slot with the label side up.

The "DISC" indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.

▶ 4-seat models



Open the cover.



while the disc is loaded.

label side up.

The player will play the track or chapter, and will repeat it after it reaches the end.

The "DISC" indicator light turns on

Insert the disc into the slot with the

STEP 3 Close the cover.

Ejecting a disc

► 5-seat models



Press and remove the disc.

▶ 4-seat models



Open the cover.



Press and remove the disc.

STEP 3 Close the cover.

Playing a disc



- 1 Audio CD, MP3/WMA discs →P.492
- 1 DVD video/audio \rightarrow P. 493
- 1 Video CD \rightarrow P. 503

3-4. Using the rear seat entertainment system


Playing an audio CD and MP3/WMA discs



3-4. Using the rear seat entertainment system

Playing a DVD video/audio

n Controller

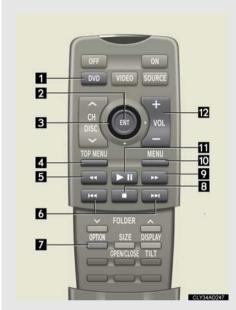

- 1 Turning on the DVD mode
- 2 Inputting the selected icon
- 3 Selecting an icon
- 4 Turning on the title selection screen
- **Rewind**
- 6 Selecting a chapter/track
- ▼ Turning on the control icon screen
- 8 Stop
- Fast forward
- Turning on the menu screen
- 11 Play/pause
- Volume up/down

n Control icon screen

Press if no icons are shown while watching a DVD video/ audio, and the following screen appears.

► DVD video mode



CLY34AD258

▶ DVD audio mode



- Hide the buttons
- Settings screen appears $(\rightarrow P.495)$
- R Fast forward
- 4 Play/pause
- **5** Stop
- 6 Rewind
- 7 8 Menu screen appears
- Change audio format

If \bigcirc appears on the screen when you select an icon, the operation relevant to that control is not permitted.


n Settings screen

Select "Settings" on the control icon screen, the following screen appears.

▶ DVD video mode



▶ DVD audio mode

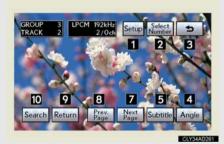

- 1 Change initial setting
- 2 Select menu number
- Return to previous screen
- 4 Change angle
- **5** Change subtitle language
- 6 Change audio language/
- 7 Go to next page
- Return to previous page
- Display the predetermined scene and start playing from there
- Search by title/group number

Turning on or off the control icons

Press Press to turn on the control icons.

Press once again or select "Hide Buttons" on the control icon screen to turn off the control icon.

Turning on the title selection screen

Press or select "Top Menu" on the control icon screen to turn on the title selection screen. For the operation of the title selection screen, see the separate manual for the DVD disc.

Turning on the menu screen (DVD video mode)

Press or select "Menu" on the control icon screen to turn on the menu screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Fast forwarding/rewinding a disc

Perform either of the following:

- 1 Select on the control icon screen by pressing and holding "ENT".
- 1 Press and hold or _____ or ____.

Slow playback

Perform either of the following:

- 1 Select and then select . Video is played slowly when you select by pressing and holding "ENT".
- 1 Press III and then press and hold III. Video is played slowly while III is being pressed.

Searching a desired screen

- n Searching by title (DVD video mode)
- STEP 1 Select "Search" on the settings screen.
- STEP 2 Input the desired title number and then select "OK".
- n Searching by group (DVD audio mode)
- STEP 1 Select "Search" on the settings screen.
- STEP 2 Input the desired group number and then select "OK".
- n Playing a bonus group (DVD audio mode, if the DVD has bonus options)
- STEP 1 Select "Search" on the settings screen.
- STEP 2 Input the desired bonus group number and select "OK".
- n Searching by chapter/track
 - Press or bound to select the desired chapter/track.
- n Selecting a menu number (DVD audio mode)
- STEP 1 Select "Select Number" on the settings screen.
- STEP 2 Input the desired menu number and select "OK".

Changing the subtitle language

STEP 1 Select "Subtitle" on the settings screen.



Select "Subtitle".

Each time you press "ENT", the next available language is selected.

"Hide": hide the subtitle

Changing the audio language (DVD video mode)

STEP 1 Select "Audio" on the settings screen.



Select "Audio".

Each time you press "ENT", the next available language is selected.

Changing the audio format (DVD audio mode)

STEP 1 Select "Audio" on the control icon screen.



Select "Audio".

Each time you press "ENT", the next available audio format is selected.

Changing the angle (If the angle option is available)

STEP 1 Select "Angle" on the settings screen.



Select "Angle".

Each time you press "ENT", the next available angle is selected.

Changing the page (DVD audio mode)

Select "Prev. Page" or "Next Page" on the settings screen to change the page.

Initial DVD setup

n Displaying "Setup Menu" screen

STEP 1 Select "Setup" on the settings screen.



After you change the initial settings, select "OK".

"Default": restores default settings

"Page $2 \rightarrow$ ": goes to Page 2



n Setting audio language (DVD video mode)

STEP 1 Select "Audio Language" on the "Setup Menu 1" screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select "Other" and input the desired language code. $(\rightarrow P. 501)$

n Setting subtitle language

STEP 1 Select "Subtitle Language" on the "Setup Menu 1" screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select "Other" and input the desired language code. $(\rightarrow P. 501)$

n Setting menu language

- STEP 1 Select "DVD language" on the "Setup Menu 1" screen.
- STEP 2 Select the desired language.

If you cannot find the desired language, select "Other" and input the desired language code. (→P. 501)

n Setting angle mark

If the DVD has angle options, you can turn the angle mark on or off.

- STEP 1 Select "Angle Mark" on the "Setup Menu 1" screen.
- STEP 2 Select "ON" or "OFF".

n Setting parental lock (DVD video mode)

- STEP 1 Select "Parental Lock" on the "Setup Menu 1" screen.
- Step 2 Input the 4-digit personal code and then select "OK".

 Select 10 times to reset the personal code.
- STEP 3 Select a parental level (1 8). $(\rightarrow P. 436)$

$n \ \ \mathsf{Setting} \ \mathsf{sound} \ \mathsf{dynamic} \ \mathsf{range} \ (\mathsf{DVD} \ \mathsf{video} \ \mathsf{mode})$

The difference between the lowest volume and the highest volume can be adjusted.

- STEP 1 Select "Sound Dynamic Range" on the "Setup Menu 2" screen.
- STEP 2 Select "MAX", "STD" or "MIN".

n Entering a language code

If you select "Other" on the "Audio Language" screen, "Subtitle Language" screen or "DVD Language" screen, you can select a language by entering the 4-digit language code (→P. 426) if that language is available.

Input the 4-digit language code and then select "OK".

$\,\mathrm{n}\,$ When a front passenger selects "Setup Menu"



To cancel the set up operation from the front seat, select "Play".

n Rear system lock

→P.330

n Error messages

If "Region code error" is displayed, check the region code printed on the DVD matches the player's region code.

If a different message is displayed: \rightarrow P. 434

3-4. Using the rear seat entertainment system

Playing a video CD


n Controller



- Selecting an icon
- 2 Inputting the selected icon
- Rewind
- 4 Selecting a track
- **5** Turning on the control icon screen
- 6 Stop
- 7 Fast forward
- 8 Play/pause
- 9 Volume up/down

n Control icon screen

Press if no icons are shown while watching a video CD, and the following screen appears.

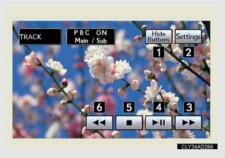

- Hide the buttons
- 2 Settings screen appears
- Fast forward
- 4 Play/pause
- **5** Stop
- 6 Rewind

If \bigcirc appears on the screen when you select an icon, the operation relevant to that control is not permitted.

n Settings screen

Select "Settings" on the control icon screen, and the following screen appears.



- Select menu number
- Return to previous screen
- 3 Change sound-multiplex
- 4 Go to next page
- 5 Return to previous page
- 6 Display the predetermined scene and start playing from there

Turning on or off the control icons

Press Press to turn on the control icons.

Press once again or select "Hide Buttons" on the control icon screen to turn off the control icon.

Fast forwarding/rewinding the video CD

Perform either of the following:

- 1 Select on the control icon screen by pressing and holding "ENT".
- 1 Press and hold or _____.

Slow playback

Perform either of the following:

- 1 Select and then select . Video is played slowly while you select by pressing and holding "ENT".
- 1 Press and then press and hold . Video is played slowly while is being pressed.

Using the video CD menu

Select "Return" on the settings screen.

Refer to the manual that comes with the video CD for specific menu items.

Selecting a desired screen

n Selecting a menu number

STEP 1 Select "Select Number" on the settings screen.

STEP 2 Input the desired menu number on the screen and select "OK".

n Searching manually

Select "Prev. Page" or "Next Page" on the settings screen, or press or until the desired screen appears.

Changing the sound-multiplex mode

Select "MAIN/SUB" on the settings screen. The mode cycles through each time "ENT" is pressed.

"Main"
$$\rightarrow$$
 "Sub" \rightarrow "Main/Sub" \uparrow

$$\rightarrow$$
P. 434

n DVD video discs

$$\rightarrow$$
P. 434

n Symbols shown on DVD video discs

$$\rightarrow$$
P. 435

n Discs that can be used

n DVD player protection feature

n If discs are left inside the DVD player or in the ejected position for extended periods

$$\rightarrow$$
P. 436

n Lens cleaners

n DVD video disc information

n Sound

$$\rightarrow$$
P.438

n MP3 and WMA files

$$\rightarrow$$
P. 438

6

Interior features

A CAUTION

n DVD video precaution

→P. 441

↑ NOTICE

n Discs and adapters that cannot be used

 \rightarrow P. 442

n Player precautions

→P. 443

OFF ON DVD VIDEO SOURCE

Press "VIDEO" to select the video mode.

Before switching to the video mode, connect the audio-video equipment to the A/V input port.

Using the port

▶ 5-seat models



Open the cover.

The A/V input port is composed of 3 input ports.

Yellow: Image input port

White: Left channel audio input port

Red: Right channel audio input port

▶ 4-seat models



Open the cover.

The A/V input port is composed of 3 input ports.

Yellow: Image input port

White: Left channel audio input

port

Red: Right channel audio input port

Changing the PAL format



Press DISPLAY .



If the video does not appear, turn "PAL VIDEO" on.

n A/V input port

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input port. For details, refer to the manufacturer's instructions.

n Power outlet

The power outlet is used to connect the audio-video equipment. $(\rightarrow P. 588)$



${\bf n}$ When the A/V input port is not in use


Keep the A/V input port cover closed.

Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

3-4. Using the rear seat entertainment system

Changing other setting

Setting the display mode

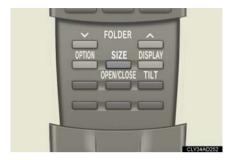

Pressing SIZE changes the display modes sequentially as follows:

Normal \rightarrow Wide 1 \rightarrow Wide 2



Adjusting the screen




Press DISPLAY .

Select the brightness, contrast, tone or color, and make adjustments.

Press DISPLAY or select "OK".

	"R"	"G"
"Color"	Red	Green
	" " -	"+"
"Tone"	Lighter	Darker
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter

Automatic closing of the rear display (4-seat models)

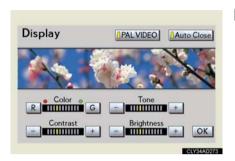



If "Auto Close" is on, the display will automatically close when the "ENGINE START STOP" switch is turned OFF.

The display will automatically open when the "ENGINE START STOP" switch is turned to ACCESSORY or IGNITION ON mode.